



Installation Manual

Hoodlifter Kit

ND0-5162

01.2017

Loosen the screws on the bonnet hinge and install the small hoodlifter adapter. Reuse the original screws and tighten to 20 – 26 Nm (pic 1)

hint: never simultaneously loosen both hinges and install the two sides separately from each other. Make sure the bonnet does not move from its original position.
Please point both ball adapters towards the front of the car when installing. (pic 2)



pic 1



pic 2

Remove the covers from the frame rails next to the front wing panels in the engine bay. (pic 3)
install the large adapters with the OEM screws, these should be tightened with 22 – 30 Nm. (pic 4)
Please notice the correct position of the adapter with the ball pointing towards the front of the car.



pic 3



pic 4

When all adapters are installed and tightened correctly, you can install the lifters.
To install the lifters correctly you will need to open the bonnet to its maximum opening position.
Please notice that the piston rod is connected to the large adapter in the engine bay (bottom), and the damper (body) to the small adapter on the hinges (top). (pic 5)

When the lifters are installed correctly please do not forget to install the safety springs!



pic 5